

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

## *User guide for BULLET*

### 1. Connecting hardware.

Connecting your device to your network is very easy, you only need one direct Ethernet cable (RJ45).

The cable is connected between the LAN entry and your Ethernet computer access.

Now just connect the RF N connector to your antenna

### 2. Applications.

This device can be set up and used for different applications:


- Simple AP (Access Point)
- Wireless Repeater
- Bridge

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

### 3. Configuring your computer in able to set up your device.

This chapter will explain you how to set up your network connection to get access to the device.


- In your computer, open Control Panel > Network Connections > Local AreaConnection.
- In Local Area Connection Status > General, click **Properties**.
- In Local Area Connection Properties > General, select **Internet Protocol (TCP/IP)** and click **Properties**.
- In Internet Protocol (TCP/IP) Properties > General, select **Use the following IP address**.
- Enter your **IP address** and **Subnet Mask**. The default IP address of the radio is **192.168.1.21**, which cannot be used here. **So type IP address 192.168.1.21 and gateway 192.168.1.20**
- Click **OK** and **Close**

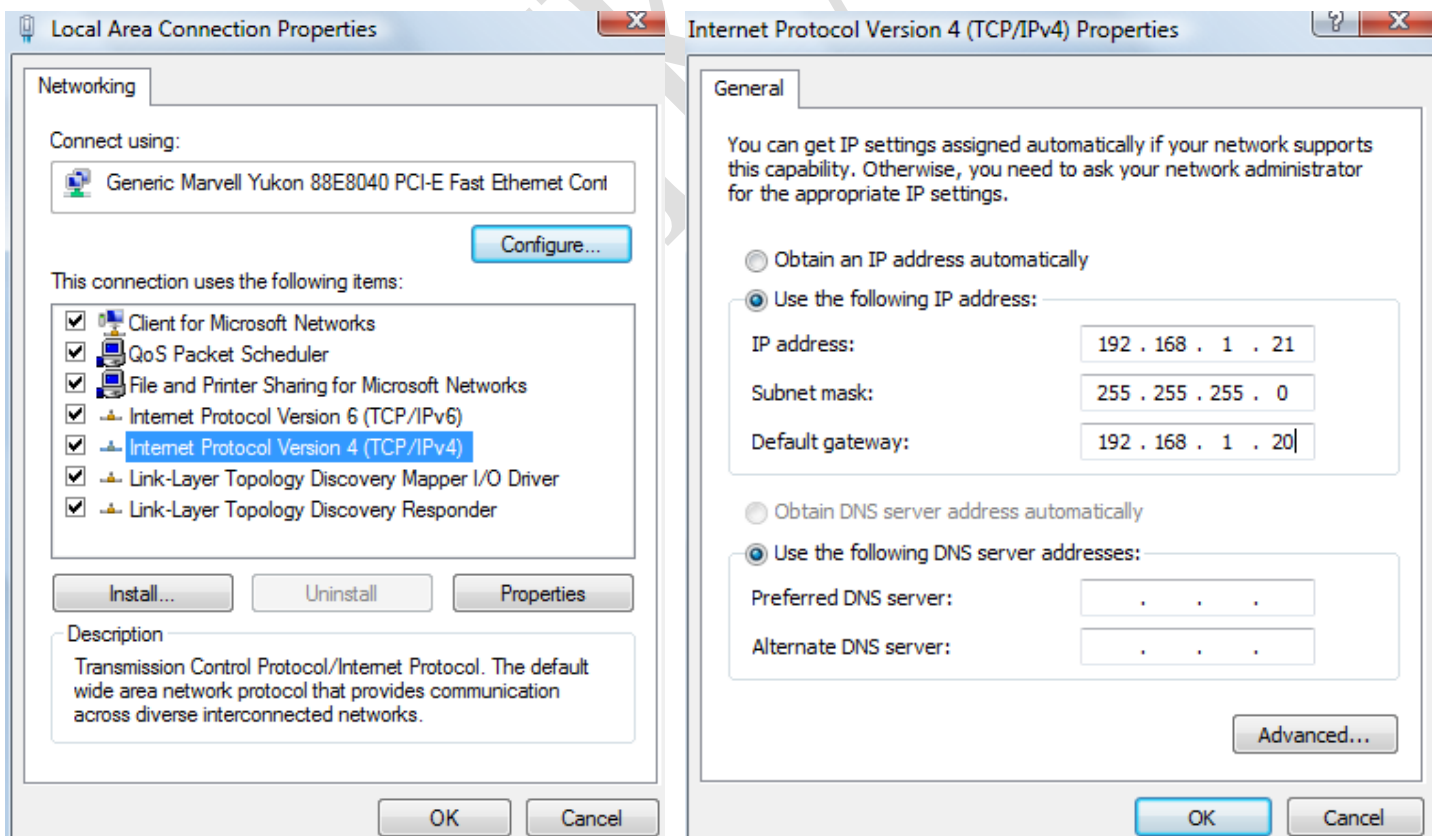

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

Open your browser (e.g. Internet Explorer, Firefox, Opera, etc.) and type in address bar: **http://192.168.1.20** (The default address of the Nano) then press the Enter key.

When the connect page appears type the default username “ubnt” and password “ubnt” below:

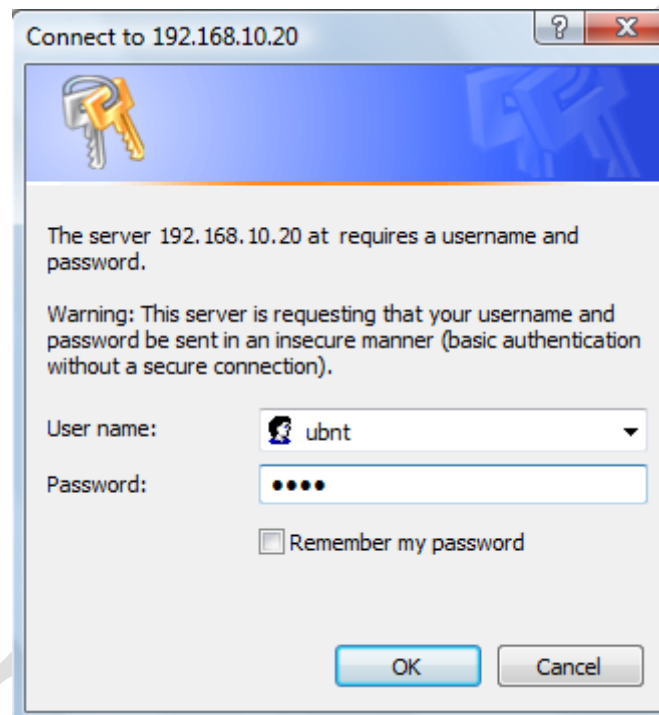

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

## 4. Configuration

- **Simple AP (Access Point)**


We consider this simply network topology:

One Router/Gateway connected to Internet and/or private LAN (IP Address: 10.10.10.254/24)

One AP AirOS device directly connected to Router (IP Address: 10.10.10.253/24)

One or more Wireless Clients (Notebook, WiFi-Phone, other Wireless devices...)

The Router assigns IP Address to network devices by DHCP Server. Alternatively, if you prefer, you can set static IP Address on Client.

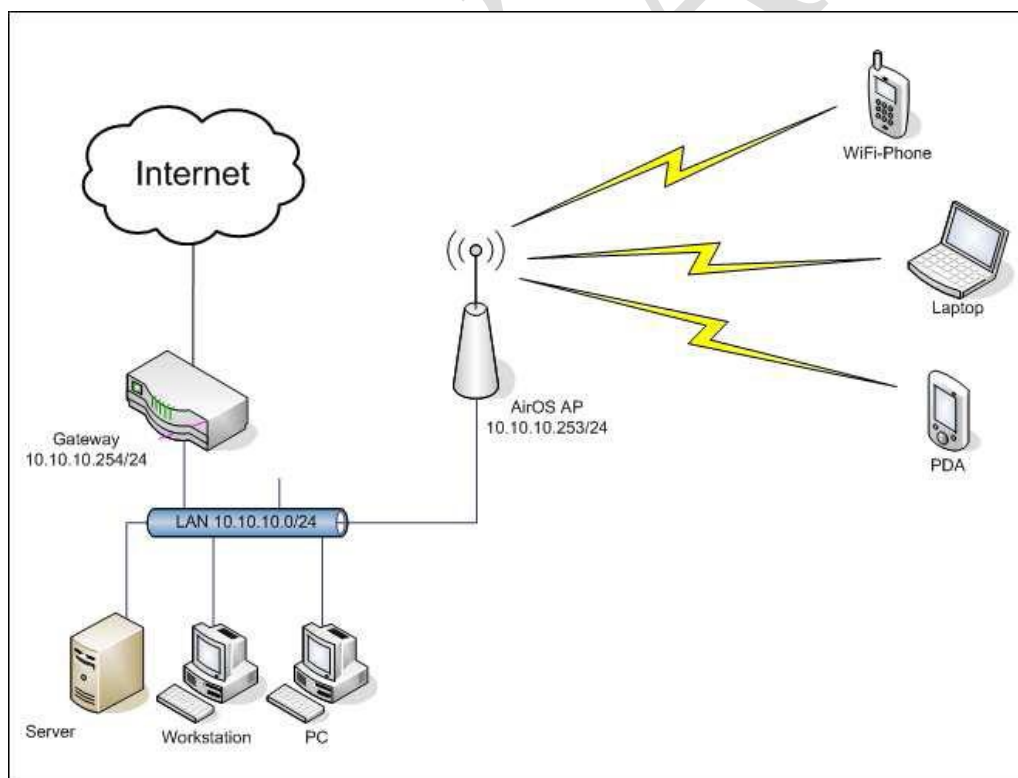


Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

In LINK SETUP Tab, set:

Wireless Mode: **Access Point**

- SSID: **yourSSID** (or any other string to identify your WLAN)
- Country Code: set according your country
- IEEE 802.11 Mode: **B/G mixed** (assuming devices running in 2.4 GHz)
- Channel: **1 - 2412 MHz** (or any other free channel)
- Output Power: **10 dBm** (or check *Obey Regulatory Power* according your country law)
- Data Rate, Mbps: **54, Auto**
- Security: **WPA** (or any other, supported by Wireless Client)

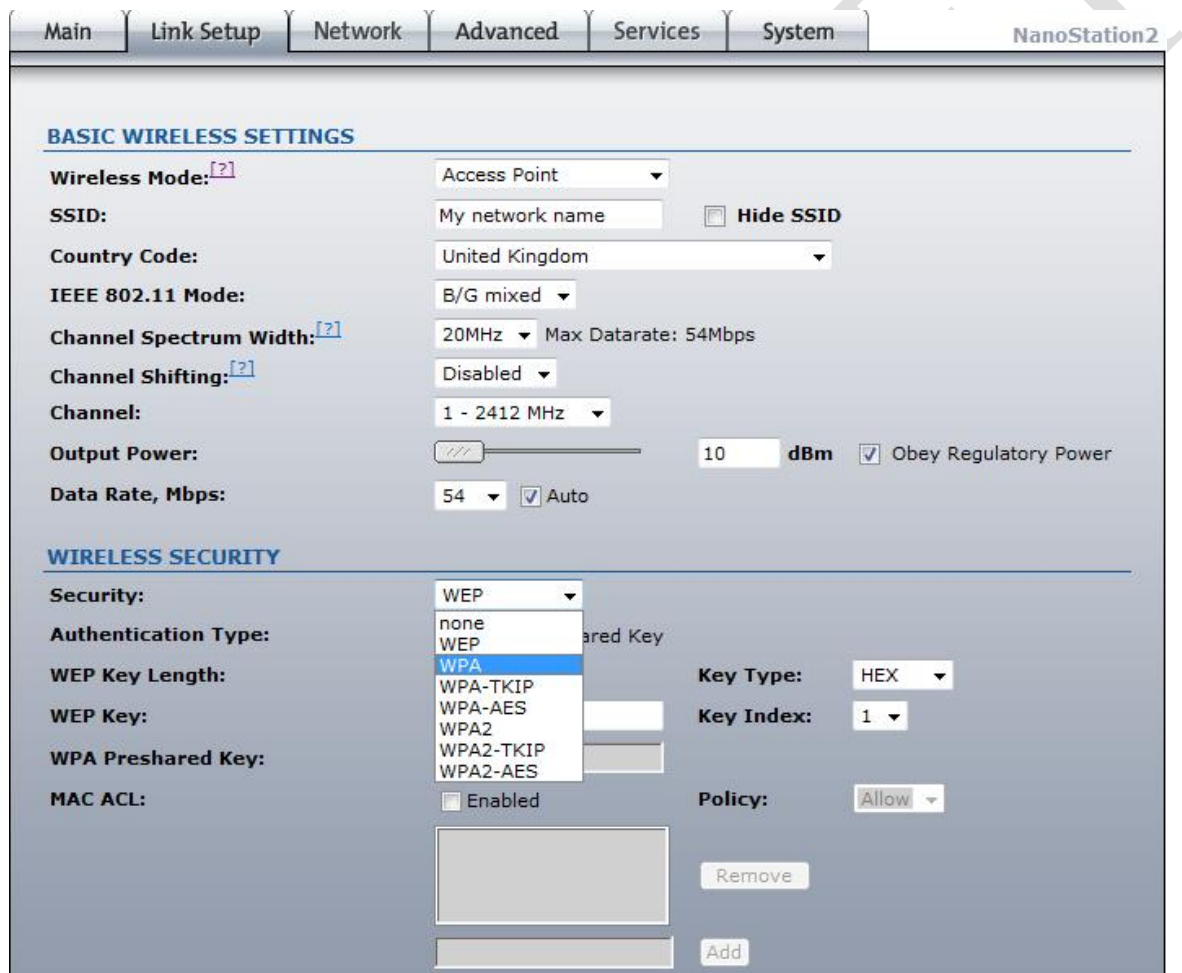


The screenshot shows the 'Link Setup' tab in the NanoStation2 interface. Under 'BASIC WIRELESS SETTINGS', the following values are set: Wireless Mode: Access Point; SSID: My network name; Country Code: United Kingdom; IEEE 802.11 Mode: B/G mixed; Channel Spectrum Width: 20MHz; Channel Shifting: Disabled; Channel: 1 - 2412 MHz; Output Power: 10 dBm; Data Rate, Mbps: 54. Under 'WIRELESS SECURITY', the Security dropdown is open, showing WPA selected. Other security settings include Authentication Type: WPA, WEP Key Length, WEP Key, WPA Preshared Key, Key Type: HEX, Key Index: 1, and Policy: Allow.

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

The device is now ready as an AP, the next step concerns setting up the network after your router/gateway. The AP has to communicate with your router in order to spread your wireless connection.

In **NETWORK TAB**, set:

- Network Mode: Bridge
- IP Address: **10.10.10.253**      **New IP address for the AP**
- Netmask: **255.255.255.0**
- Gateway IP: **10.10.10.254**      **IP address of your router/gateway**
- Primary DNS IP: **10.10.10.254** (or DNS IP provided from your ISP)
- Secondary DNS IP: as Primary DNS IP

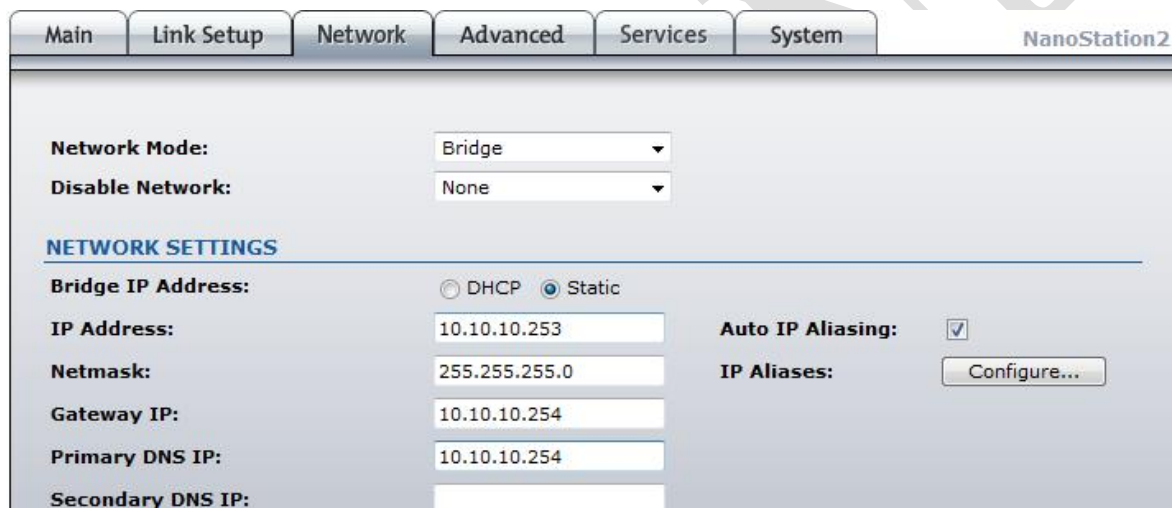

Main | Link Setup | **Network** | Advanced | Services | System | NanoStation2

**Network Mode:** Bridge

**Disable Network:** None

**NETWORK SETTINGS**

**Bridge IP Address:**  DHCP  Static

**IP Address:** 10.10.10.253      **Auto IP Aliasing:**

**Netmask:** 255.255.255.0      **IP Aliases:**

**Gateway IP:** 10.10.10.254

**Primary DNS IP:** 10.10.10.254

**Secondary DNS IP:**

Click "Change" wait until process is complete and click "Apply" to confirm new configuration

Now the devices should be reachable on new IP Address **10.10.10.254**. Remember to assign to your PC an IP of Subnet 10.10.10.x (e.g. **10.10.10.200/255.255.255.0**)

### Client Setup

In TCP/IP Network Section:

If supported, set device to obtain Address IP automatically

Otherwise set statically:


IP Address: any free IP 10.10.10.x/255.255.255.0

Gateway: 10.10.10.254

DNS: 10.10.10.254 (or DNS provided by your ISP).

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

- **Wireless Repeater**

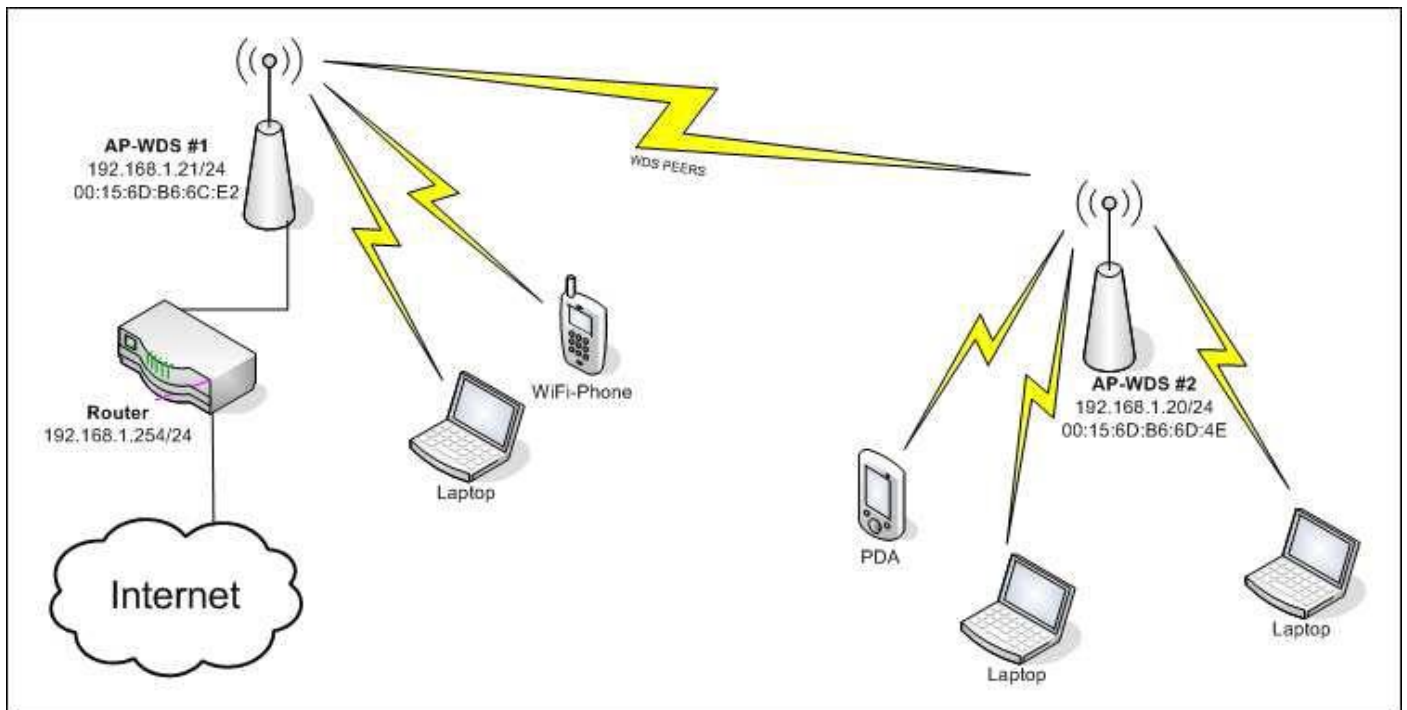

As you have previously set up your device as an AP, you are now able to set up another device as a repeater. This allows you to extend your coverage.


 First AP: X kms and X kms more with the second AP.

**We will explain below how to setup your both devices.**


Visit <http://www.AfrikaNet.net> an Oxford Consultech Project

Before starting the configuration of both AP, you will need to collect the WLAN MAC address of the PS, it is actually the physical address of the devices. You need to login into AirOS WEB User Interface of AP and write down this information:

We will select these two addresses as an example (**you need to get your personal address**)

- AP#1 WLAN MAC 11:11:11:11:11:11
- AP#2 WLAN MAC 22:22:22:22:22:22

**Be sure to have WLAN MAC of both devices before starting configuration**

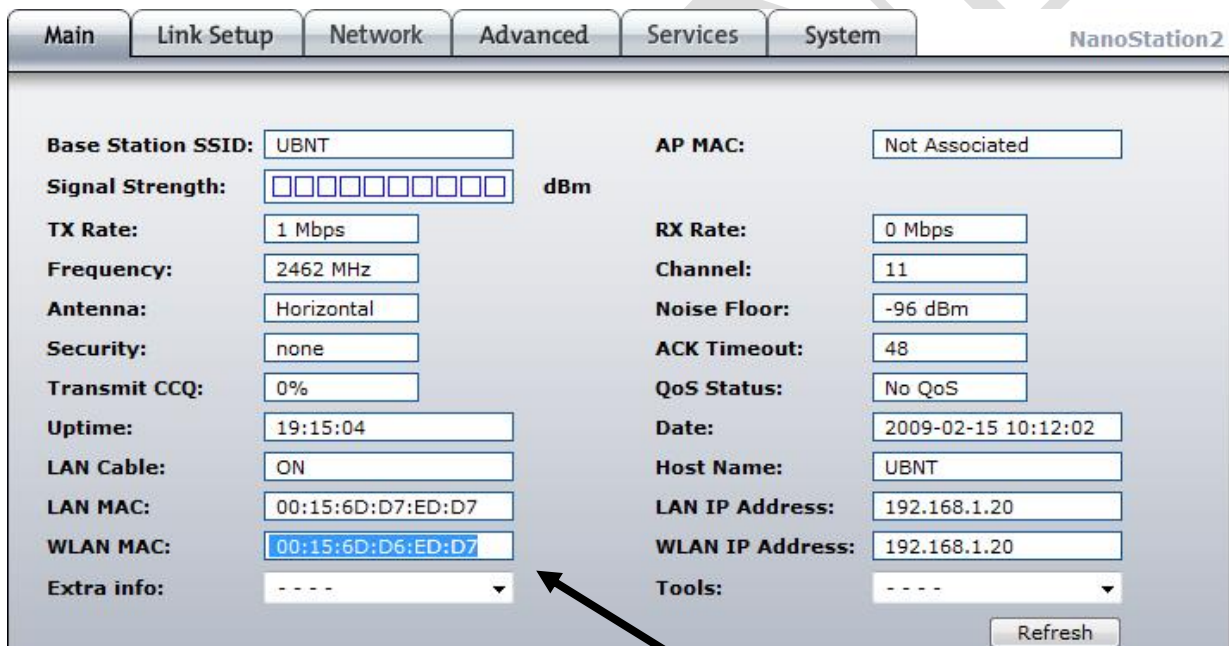

The screenshot shows the configuration page for a NanoStation2. The 'WLAN MAC' field is highlighted in blue and contains the value '00:15:6D:D6:ED:D7'. An arrow points from the text below to this field.

WLAN MAC of both AP in this Tab



Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

- **AP #1 Setup**

Login into AirOS WEB User Interface of **AP #1** and set as below:

**NETWORK** Tab

- Network Mode: **Bridge**
- IP Address: **10.10.10.253**
- Netmask: **255.255.255.0**
- Gateway IP: **10.10.10.254**
- Bridge IP Address: **Static**

New IP address for the AP

IP address of your router/gateway

Click *Change* button to confirm  
Click *Apply* button to apply changes  
Wait until process is complete

**LINK SETUP** Tab

- Wireless Mode: **Access Point WDS**
- **WDS Peers: 22:22:22:22:22:22**  
**WLAN MAC of AP #2, you can see on MAIN Tab of AP #2**
- SSID: **my wlan** (or any string to identify your WLAN, but the same for all WDS Peers)
- Country Code: set according your location
- IEEE 802.11 Mode: **B/G mixed** (assuming devices running in 2.4 GHz band)
- Channel Spectrum Width **20MHz**
- Channel: **1 - 2412 MHz** (or any other free channel, but the same for all WDS Peers)
- Output Power: **10 dBm** (or check *Obey Regulatory Power* according your country law)
- Data Rate, Mbps: **54, Auto**



Nord Sud TT - Oxford ConsulTech International

Strategic & Telecom Adviser, VSAT & Satellite Communication

We are Wholesaler in  
Telecommunications  
Computers  
Internet

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

Main | Link Setup | Network | Advanced | Services | System NanoStation2

### BASIC WIRELESS SETTINGS

Wireless Mode:	Access Point WDS	<input type="checkbox"/> Auto
WDS Peers:	22:22:22:22:22:22	
SSID:	MY WLAN	<input type="checkbox"/> Hide SSID
Country Code:	United Kingdom	
IEEE 802.11 Mode:	B/G mixed	
Channel Spectrum Width:	20MHz	Max Datarate: 54Mbps
Channel Shifting:	Disabled	
Channel:	1 - 2412 MHz	
Output Power:	<input type="range"/>	10 dBm <input checked="" type="checkbox"/> Obey Regulatory Power
Data Rate, Mbps:	54	<input checked="" type="checkbox"/> Auto

### WIRELESS SECURITY

Security:	none
-----------	------

Click *Change* button to confirm  
Click *Apply* button to apply changes  
Wait until process is complete

## AP #2 Setup

### NETWORK Tab

- Network Mode: **Bridge**
- IP Address: **10.10.10.253**
- Netmask: **255.255.255.0**
- Gateway IP: **10.10.10.254**
- Bridge IP Address: **Static**

**New IP address for the AP**

**IP address of your router/gateway**

Click *Change* button to confirm  
Click *Apply* button to apply changes  
Wait until process is complete

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

### LINK SETUP Tab

- Wireless Mode: **Access Point WDS**
- Auto: **enable** check box
- **WDS Peers: 11:11:11:11:11:11**  
**WLAN MAC of AP #1, you can see on MAIN Tab of AP #1**
- SSID: **my wlan** (or any string to identify your WLAN, but the same for all WDS Peers)
- Country Code: set according your location
- IEEE 802.11 Mode: **B/G mixed** (assuming devices running in 2.4 GHz band)
- Channel Spectrum Width: **20MHz**
- Channel: **1 - 2412 MHz** (or any other free channel, but the same for all WDS Peers)
- Output Power: **10 dBm** (or check *Obey Regulatory Power* according your country law)
- Data Rate, Mbps: **54, Auto**



The screenshot shows the WinBox interface for a NanoStation2. The 'Link Setup' tab is selected. Under 'BASIC WIRELESS SETTINGS', the following values are configured: Wireless Mode is 'Access Point WDS' with 'Auto' checked; WDS Peers is '11:11:11:11:11:11'; SSID is 'MY WLAN' with 'Hide SSID' unchecked; Country Code is 'United Kingdom'; IEEE 802.11 Mode is 'B/G mixed'; Channel Spectrum Width is '20MHz' with a maximum data rate of 54Mbps; Channel Shifting is 'Disabled'; Channel is '1 - 2412 MHz'; Output Power is set to 10 dBm with 'Obey Regulatory Power' checked; and Data Rate is '54' Mbps with 'Auto' checked. The 'WIRELESS SECURITY' section shows 'Security' set to 'none'.

Click *Change* button to confirm  
 Click *Apply* button to apply changes  
 Wait until process is complete

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

- **Bridge**

**This mode allows you to:**

- Share a neighbors internet connection from across the street (must have there permission and must be legal from there provider).
- Bridge your internet/local area network with another building.
- Make a standard layer 2 transparent bridge for joining two LAN networks.

For this mode, you need two devices, in order to setup a point to point connection (PxP).

**AP #1 Setup (the side with the internet connection)**


Login into AirOS WEB User Interface of **AP #1** and set as below

**LINK SETUP Tab**

Wireless Mode: **Access Point WDS**

- SSID: **MY WLAN** (or any other string to identify your WLAN)
- Country Code: set according your country
- IEEE 802.11 Mode: **B/G mixed** (assuming devices running in 2.4 GHz)
- Channel: **6 - 2437 MHz** (or any other free channel)
- Output Power: **10 dBm** (or check *Obey Regulatory Power* according your country law)
- Data Rate, Mbps: **54, Auto**
- Security: **WPA** (or any other, supported by Wireless Client)

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

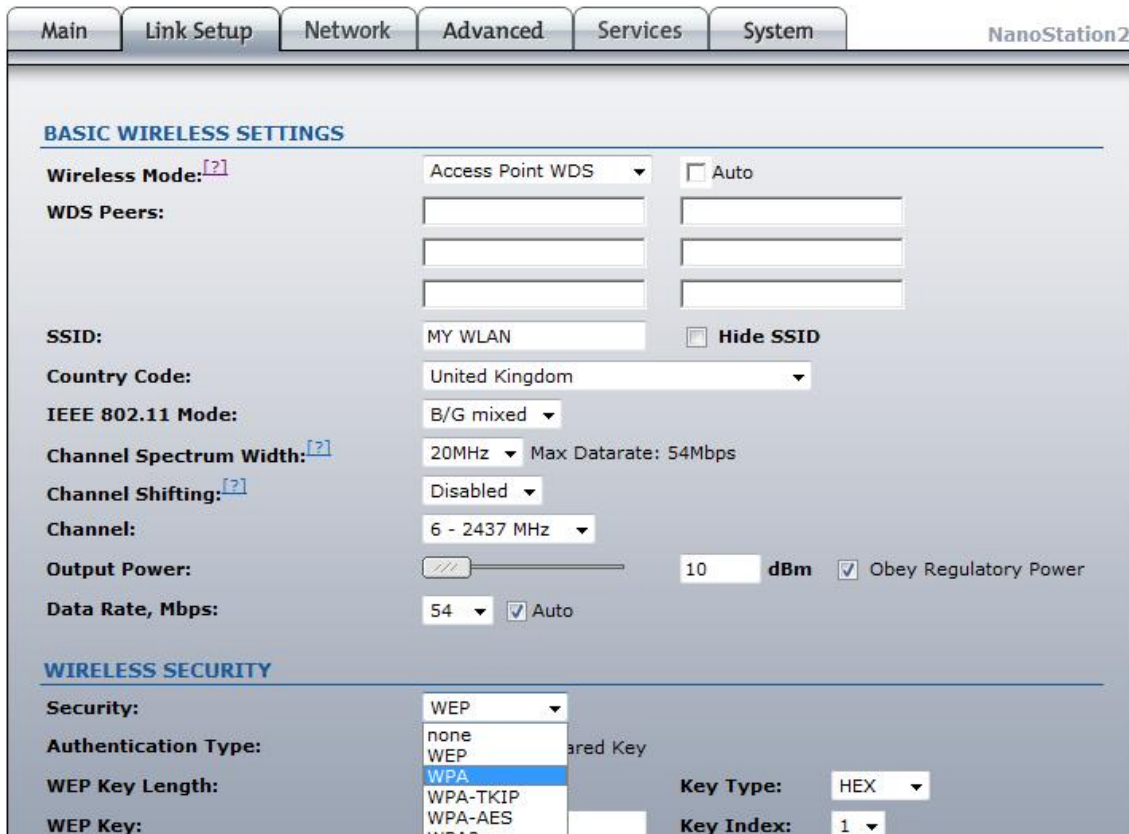

Once you have changed all settings, hit the Change button at the bottom of the screen. DO NOT HIT the apply button that appears at the top of the screen just yet.

## NETWORK Tab

- Network Mode: **Bridge**
- **Bridge IP Address:** Set this to DHCP
- **Auto Fallback IP:** Leave this setting to default. If for some reason the unit does not get an IP address you will use this fallback IP to access the unit.

Click *Change* button to confirm  
 Click *Apply* button to apply changes  
 Wait until process is complete

Now that the unit has rebooted, unplug the Ethernet from your computer and plug the device into an open LAN port of your router. Once this is done the unit is setup and ready to accept the station side of the bridge.

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

### **AP #1 Setup (the side to bring the internet connection)**

Login into AirOS WEB User Interface of **AP #2** and set as below

#### **LINK SETUP Tab**

Wireless Mode: **Station**

- SSID: **MY WLAN** (or any other string to identify your WLAN)
- Country Code: set according your country
- IEEE 802.11 Mode: **B/G mixed** (assuming devices running in 2.4 GHz)
- Output Power: **10 dBm** (or check *Obey Regulatory Power* according your country law)
- Data Rate, Mbps: **54, Auto**
- Security: **WPA or WEP** (or any other, supported by Wireless Client)

#### **NETWORK Tab**

- Network Mode: **Bridge**
- **Bridge IP Address:** Set this to DHCP
- **Auto Fallback IP:** Leave this setting to default. If for some reason the unit does not get an IP address you will use this fallback IP to access the unit.

Click *Change* button to confirm  
Click *Apply* button to apply changes  
Wait until process is complete

Now that the unit has rebooted, unplug the Ethernet from your computer and plug the device into an open WAN port of your router, or directly into the computer you want to have access to the internet. This completes the bridging setup of the UBNT device. If you cannot get it to work following the provided instructions please visit:

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

Use antenna alignment tool to adjust the device antenna to get better link with the wireless device. The antenna of wireless client has to be adjusted to get maximum signal strength.

Click the **Align Antenna...** button and the new pop-up window with signal strength indicator will appear. **RSSI Range** slider can be used to change an offset of the maximum indicator value.

Window reloads every second displaying current value of the signal strength: **TX Rate**

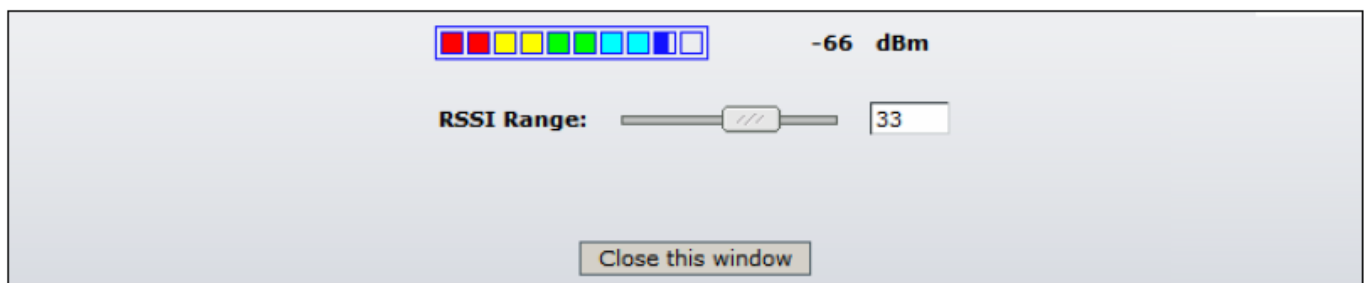


Figure 3 – Antenna alignment Tool

**RX Rate:** displays the current data reception rate while operating in *Station* mode.

**Channel:** displays the channel used by device to transmit and receive data.

**Frequency:** displays the frequency used by device to transmit and receive data.

**Antenna Polarity:** displays the current Antenna Polarity setting.

**Security:** displays the security method, which is set on the device.

**ACK Timeout:** displays current ACK Timeout value, which is set on the device manually or adjusted automatically.

**QoS Status:** displays the QoS Status, which is set on the device.

**Uptime:** indicates the time, expressed in days, hours, minutes and seconds since last hard-reboot.

**LAN Cable:** displays the current status of the Ethernet port connection.

**LAN MAC:** displays the MAC address of the LAN (Ethernet) interface.

**WLAN MAC:** displays the MAC address of the WLAN (Wireless) interface.

**LAN IP address:** displays the current IP address of the LAN (Ethernet) interface while operating in *Router* mode.

**WLAN IP address:** displays the current IP address of the WLAN (Wireless) interface while operating in *Router* mode.

**LAN IP address and WLAN IP address** displays the same value - current IP address of the virtual bridge interface, while operating in *Bridge* mode.



We are Wholesaler in  
Telecommunications  
Computers  
Internet

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

**Show Stations...** selection lists the stations which are connected to the device while operating in Access Point mode. Each station **RSSI**, **Tx Rate** and **Idle** time (sec) can be updated using the **Reload** button:

Station MAC	RSSI	Tx Rate	Idle (sec)
00:15:6D:A6:00:1E	51	54M	30

Figure 4 – Current Status of the Associated Stations

For all other problems, please contact Afrikanet or go on our website [www.afrikanet.net](http://www.afrikanet.net) :

**Afrikanet Oxford ConsulTech NST & T Universal Phones UK Ltd**  
**Oxford Culham Innovations Center – Building D5**  
**Science Park – Abingdon – OX143DB –**  
**Oxfordshire United Kingdom**  
**TEL +44 1865 408 365**  
**FAX +44 207 900 6479**





Nord Sud TT - Oxford ConsulTech International

Strategic & Telecom Adviser, VSAT & Satellite Communication

We are Wholesaler in  
Telecommunications  
Computers  
Internet

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

## 5. Specification



BULLET2 DATASHEET

**BULLET<sup>2</sup>**  
UBIQUITI NETWORKS  
Zero Variable Outdoor Wireless Deployment



SYSTEM INFORMATION							
Processor Specs		Atheros MIPS 4KC, 180MHz					
Memory Information		16MB SDRAM, 4MB Flash					
Networking Interface		1 X 10/100 BASE-TX (Cat. 5, RJ-45) Ethernet Interface					
REGULATORY / COMPLIANCE INFORMATION							
Wireless Approvals		FCC Part 15.247, IC RS210, CE					
RoHS Compliance		YES					
RADIO OPERATING FREQUENCY 2412-2462 MHz							
TX SPECIFICATIONS				RX SPECIFICATIONS			
802.11b	DataRate	TX Power	Tolerance	802.11b	DataRate	Sensitivity	Tolerance
	1Mbps	20 dBm	+/-1dB		1Mbps	-95 dBm	+/-1dB
	2Mbps	20 dBm	+/-1dB		2Mbps	-94 dBm	+/-1dB
	5.5Mbps	20 dBm	+/-1dB		5.5Mbps	-93 dBm	+/-1dB
	11Mbps	20 dBm	+/-1dB		11Mbps	-90 dBm	+/-1dB
802.11g OFDM	6Mbps	20 dBm	+/-1dB	802.11g OFDM	6Mbps	-92 dBm	+/-1dB
	9Mbps	20 dBm	+/-1dB		9Mbps	-91 dBm	+/-1dB
	12Mbps	20 dBm	+/-1dB		12Mbps	-89 dBm	+/-1dB
	18Mbps	20 dBm	+/-1dB		18Mbps	-88 dBm	+/-1dB
	24Mbps	20 dBm	+/-1dB		24Mbps	-84 dBm	+/-1dB
	36Mbps	18 dBm	+/-1dB		36Mbps	-81 dBm	+/-1dB
	48Mbps	16 dBm	+/-1dB		48Mbps	-75 dBm	+/-1dB
	54Mbps	15 dBm	+/-1dB		54Mbps	-72 dBm	+/-1dB




Nord Sud TT - Oxford ConsulTech International

Strategic & Telecom Adviser, VSAT & Satellite Communication

We are Wholesaler in  
Telecommunications  
Computers  
Internet

Visit <http://www.AfrikaNet.net> an Oxford ConsulTech Project

ADJUSTABLE CHANNEL SIZE SUPPORT		
5MHz	10MHZ	20MHz
<b>RANGE PERFORMANCE</b>		
Outdoor (Antenna Dependent):		Over 50km
<b>PHYSICAL / ELECTRICAL / ENVIRONMENTAL</b>		
RF Connector	Integrated N-type Male Jack (connects directly to antenna)	
Enclosure Size	15.2cm. length x 3.1 cm. height x 3.7cm. width	
Weight	0.18kg	
Enclosure Characteristics	Outdoor UV Stabalized Plastic	
Max Power Consumption	4 Watts	
Power Rating	Up to 24V	
Power Method	Passive Power over Ethernet (pairs 4,5+; 7,8 return)	
Operating Temperature	-20C to +70C	
Operating Humidity	5 to 95% Condensing	
Shock and Vibration	ETSI300-019-1.4	
<b>SOFTWARE</b>		
		
visit <a href="http://www.ubnt.com/airos">www.ubnt.com/airos</a>		



495-499 Montague Expwy. Milpitas, CA 95035 CA 95035 T(408)-942-3085 F (408)-351-4973 <http://www.ubnt.com>

AFRIKANET